



# CPSC Safety Alert

## Don't Let Children Put Caps for Toy Guns in Their Pockets

### Prevent Burn Injuries

 
The U.S. Consumer Product Safety Commission (CPSC) recommends that parents warn children not to put ring caps, paper roll caps, or strip caps for toy guns in their pockets because friction can ignite the caps and cause burns.

Toy caps contain a small amount of pyrotechnic material that ignites when struck and creates a loud noise accompanied by sparks. Some manufacturers label their packages cautioning users not to carry caps in pockets.


CPSC urges parents to explain the hazards of ignition of toy caps to children and to make sure that children do not put caps in their pockets.

CPSC reminds parents that caps may also pose a noise hazard.


Do not fire closer than 1 foot to the ear. Do not use indoors.

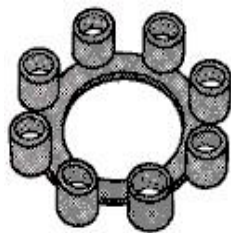

RING CAPS

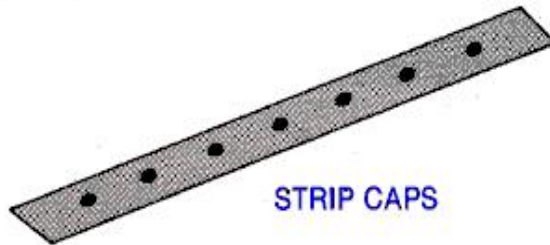 

STRIP CAPS

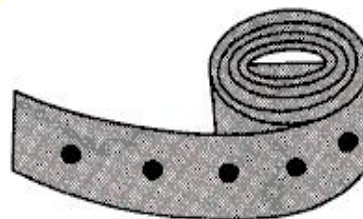 

ROLL CAPS

**Do not put caps in pockets because the caps may ignite and cause burn injuries**