



AN ENVIRONMENTAL ANALYTICAL LABORATORY

COMPREHENSIVE VALIDATION PACKAGE

ATL Applications
INVENTORY SHEET

WORK ORDER # 1010269C

	Page Nos.	
	From	To
1. Work Order Cover Page & Laboratory Narrative & Table	1	3
2. Sample Results and Raw Data (Organized By Sample)	4	7
a. ATL Sample Results Form		
b. Target Compound Raw Data		
-Internal Standard Area and Retention Time Summary (If Applicable)		
-Surrogate Recovery Summary (If Applicable)		
-Chromatogram(s) and Ion Profiles (If Applicable)		
3. QC Results and Raw Data		
a. Method Blank (Results + Raw Data)	-	-
b. Surrogate Recovery Summary Form (If Applicable)	-	-
c. Internal Standard Summary Form (If Applicable)	-	-
d. Duplicate Results Summary Sheet	-	-
e. Matrix Spike/Matrix Spike Duplicate (Results + Raw Data)	-	-
f. Initial Calibration Data (Summary Sheet + Raw Data)	-	-
g. MDL Study (If Applicable)	-	-
h. Continuing Calibration Verification Data	-	-
i. Second Source LCS (Summary + Raw Data)	-	-
j. Extraction Logs	-	-
k. Instrument Run Logs/Software Verification	8	15
l. GC/MS Tune (Results + Raw Data)	-	-
4. Shipping/Receiving Documents:		
a. Login Receipt Summary Sheet	16	17
b. Chain-of-Custody Records	18	18
c. Sample Log-In Sheet	19	20
d. Misc. Shipping/Receiving Records (list individual records)		
Sample Receipt Discrepancy Report	21	22
5. Other Records (describe or list)		
a. <u>Manual Spectral Defense</u>	-	-
b. <u>Manual Intergrations</u>	-	-
c. <u>Manual Calculations</u>	-	-
d. <u>Canister Dilution Factors</u>	-	-
e. <u>Laboratory Corrective Action Request</u>	-	-
f. <u>CAS Number Reference</u>	23	24
g. <u>Variance Table</u>	-	-
h. <u>Canister Certification</u>	-	-
i. <u>Data Review Check Sheet</u>	25	25

Completed by:

Kara McKiernan

(Signature)

Kara McKiernan/ Document Control

(Print Name & Title)

10/28/10

(Date)

WORK ORDER #: 1010269C

Work Order Summary

CLIENT:	Mr. Brian Baker Environmental Health & Engineering, Inc. 117 Fourth Avenue Needham, MA 02494	BILL TO:	Accounts Payable Environmental Health & Engineering, Inc. 117 Fourth Avenue Needham, MA 02494
PHONE:	800-825-5343	P.O. #	17314
FAX:	781-247-4305	PROJECT #	17314
DATE RECEIVED:	10/13/2010	CONTACT:	Ausha Scott
DATE COMPLETED:	10/26/2010		

<u>FRACTION #</u>	<u>NAME</u>	<u>TEST</u>
33A	115487	ATL Applications
34A	115488	ATL Applications
35A	115489	ATL Applications
36A	115490	ATL Applications
37A	115579	ATL Applications
38A	115580	ATL Applications
39A	115581	ATL Applications
40A	115582	ATL Applications
41A	115583	ATL Applications
42A	115584	ATL Applications
43A	115696	ATL Applications
44A	115697	ATL Applications
45A	115698	ATL Applications
46A	115699	ATL Applications
47A	115700	ATL Applications
48A	115701	ATL Applications
48AA	115701 Lab Duplicate	ATL Applications
49A	Lab Blank	ATL Applications

Continued on next page


WORK ORDER #: 1010269C

Work Order Summary

CLIENT:	Mr. Brian Baker Environmental Health & Engineering, Inc. 117 Fourth Avenue Needham, MA 02494	BILL TO:	Accounts Payable Environmental Health & Engineering, Inc. 117 Fourth Avenue Needham, MA 02494
PHONE:	800-825-5343	P.O. #	17314
FAX:	781-247-4305	PROJECT #	17314
DATE RECEIVED:	10/13/2010	CONTACT:	Ausha Scott
DATE COMPLETED:	10/26/2010		

<u>FRACTION #</u>	<u>NAME</u>	<u>TEST</u>
49B	Lab Blank	ATL Applications
50A	LCS	ATL Applications

CERTIFIED BY:

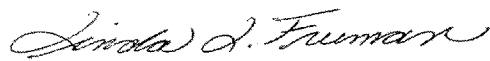

Laboratory Director

DATE: 10/26/10

This report shall not be reproduced, except in full, without the written approval of Air Toxics Ltd.

180 BLUE RAVINE ROAD, SUITE B FOLSOM, CA - 95630
(916) 985-1000 . (800) 985-5955 . FAX (916) 985-1020

LABORATORY NARRATIVE
Hydrogen Sulfide by Radiello 170
Environmental Health & Engineering, Inc.
Workorder# 1010269C

Sixteen Radiello 170 (H₂S) samples were received on October 13, 2010. The procedure involves adsorption of H₂S by zinc acetate to form zinc sulfide. The sulfide is then recovered by extraction with water and addition of ferric chloride in a strongly acidic solution to produce methylene blue. Methylene blue absorbance is then measured at 665 nm using a spectrophotometer. Results are reported in uG and uG/m³.

Sampling rate of 69 mL/min for H₂S was provided by the manufacturer.

Receiving Notes

Sample collection date was not provided on the Chain of Custody for any sample. The client was contacted and the dates were provided.

Analytical Notes

Results were calculated based on 25 deg C without temperature correction. The actual exposure time was used to calculate sample concentrations and reporting limits.

An exposure time of 21270 minutes was used for the QC samples and trip blanks.

Definition of Data Qualifying Flags

Eight qualifiers may have been used on the data analysis sheets and indicate as follows:

- B - Compound present in laboratory blank greater than reporting limit.
- J - Estimated value.
- E - Exceeds instrument calibration range.
- S - Saturated peak.
- Q - Exceeds quality control limits.
- U - Compound analyzed for but not detected above the detection limit.
- M - Reported value may be biased due to apparent matrix interferences.
- N - The identification is based on presumptive evidence.

File extensions may have been used on the data analysis sheets and indicates as follows:

- a-File was requantified
- b-File was quantified by a second column and detector
- r1-File was requantified for the purpose of reissue

Sample Results and Raw Data

AIR TOXICS LTD.

ATL Application # 59 for RAD 170 (Hydrogen Sulfide)

Spectrophotometer

Field Sample I.D.	Lab Sample I.D.	Collection Date	Analysis Date	Dilution Factor	Reporting Limit (ug)	Reporting Limit (ug/m3)	Amount (ug)	Amount (ug/m3)
115487	1010269C-33A	NA	10/18/2010	1.00	0.80	0.51	ND	ND
115488	1010269C-34A	NA	10/18/2010	1.00	0.80	0.51	2.3	1.5
115489	1010269C-35A	NA	10/18/2010	1.00	0.80	0.51	ND	ND
115490	1010269C-36A	NA	10/18/2010	1.00	0.80	0.51	ND	ND
115579	1010269C-37A	NA	10/18/2010	1.00	0.80	0.55	1.3	0.89
115580	1010269C-38A	NA	10/18/2010	1.00	0.80	0.55	1.4	1.0
115581	1010269C-39A	NA	10/18/2010	1.00	0.80	0.55	1.5	1.0
115582	1010269C-40A	NA	10/18/2010	1.00	0.80	0.55	1.6	1.1
115583	1010269C-41A	NA	10/18/2010	1.00	0.80	0.51	ND	ND
115584	1010269C-42A	NA	10/18/2010	1.00	0.80	0.51	ND	ND
115696	1010269C-43A	NA	10/18/2010	1.00	0.80	0.55	1.6	1.1
115697	1010269C-44A	NA	10/18/2010	1.00	0.80	0.55	1.5	1.0
115698	1010269C-45A	NA	10/18/2010	1.00	0.80	0.55	1.1	0.75
115699	1010269C-46A	NA	10/18/2010	1.00	0.80	0.55	3.1	2.2
115700	1010269C-47A	NA	10/18/2010	1.00	0.80	0.51	ND	ND
115701	1010269C-48A	NA	10/18/2010	1.00	0.80	0.51	ND	ND
115701 Lab Duplicate	1010269C-48AA	NA	10/18/2010	1.00	0.80	0.51	ND	ND
Method Blank	1010269C-49A	NA	10/18/2010	1.00	0.80	0.51	ND	ND
Method Blank	1010269C-49B	NA	10/18/2010	1.00	0.80	0.51	ND	ND
LCS	1010269C-50A	NA	10/18/2010	1.00	0.80	0.51	%Rec 131	

COMMENTS: 1. NA=Not Applicable

2. ND=Not Detected

3. Exposure time of 1 minutes was assumed for the QC samples.

4. Background subtraction not performed.

Workorder #: 1010269C

1010269C

Sampling Rate (ng/ppb.min)

0.096 Typically 0.096 for H₂S

Sampling T (deg C)	25 Typically
Volume (mL)	10.5 Typically 10.5 for H2S

Date of Analysis:	10/18/2010
Corrected Q	0.096
Takes into account temp	

Corrected Q

Takes into account temp

LabSampleID

Client

Collection

A

(min)

DF

sulfide

Conc (ug) of sulfide

Conc (ug) of H2S

Conc (ppb) of H₂S

Conc (ug/m3) of H2S

Q includes conversion from Sulfide to H₂S

e to H2S

Q x Duration

24.45

33A	115487	NA	0.090	21270	1.00	0.047454802	0.498275424	0.529536109	0.244	0.340
34A	115488	NA	0.263	21270	1.00	0.210363217	2.208813778	2.347389809	1.082	1.508
35A	115489	NA	0.021	21270	1.00	-0.01752023	-0.183962416	-0.195503806	-0.090	0.126
36A	115490	NA	0.022	21270	1.00	-0.016578563	-0.174074911	-0.184995981	-0.085	-0.119
37A	115579	NA	0.163	19800	1.00	0.116196503	1.220063385	1.296607324	0.642	0.895
38A	115580	NA	0.173	19800	1.00	0.125613175	1.318938334	1.401685572	0.694	0.964
39A	115581	NA	0.179	19800	1.00	0.131263177	1.378263364	1.464733521	0.725	1.011
40A	115582	NA	0.188	19800	1.00	0.139738182	1.467250908	1.559302945	0.772	1.076
41A	115583	NA	0.02	21270	1.00	-0.018461897	-0.193849921	-0.206011631	-0.095	-0.132
42A	115584	NA	0.021	21270	1.00	-0.01752023	-0.183962416	-0.195503806	-0.090	-0.126
43A	115696	NA	0.195	19710	1.00	0.146329852	1.366463443	1.632857719	0.812	1.132
44A	115697	NA	0.178	19710	1.00	0.13032151	1.368375859	1.45424696	0.773	1.008
45A	115698	NA	0.142	19710	1.00	0.096421493	1.012425681	1.075943002	0.535	0.746
46A	115699	NA	0.335	19710	1.00	0.278163251	2.920714133	3.103953199	2.152	2.152
47A	115700	NA	0.024	21270	1.00	-0.014695229	-0.154299901	-0.163980332	-0.076	-0.105
48A	115701	NA	0.021	21270	1.00	-0.01752023	-0.183962416	-0.195503806	-0.090	-0.126
48AA	115701 Lab Duplicate	NA	0.026	21270	1.00	-0.012811894	-0.134524891	-0.142964682	-0.066	-0.092
					1.00	-0.03729524	-0.39160002	-0.416168128	#DIV/0!	#DIV/0!
					1.00	-0.03729524	-0.39160002	-0.416168128	#DIV/0!	#DIV/0!
					1.00	-0.03729524	-0.39160002	-0.416168128	#DIV/0!	#DIV/0!
					1.00	-0.03729524	-0.39160002	-0.416168128	#DIV/0!	#DIV/0!
					1.00	-0.03729524	-0.39160002	-0.416168128	#DIV/0!	#DIV/0!
49A	Method Blank	NA	0.02	21270	1.00	-0.018461897	-0.193849921	-0.206011631	-0.095	-0.132
49B	Method Blank	NA	0.018	21270	1.00	-0.020345232	-0.213624931	-0.227027281	-0.105	-0.146
50A	LCS	NA	0.224	21270	1.00	0.173638199	1.823201086	1.93758464	0.893	1.245

QC Duration
1

0.133

Verified: HH and AW on 9/4/09

Low PointPDF

RL(ug/ml)xVol (mL)

RL (ug sulfide) *MW H2S
MW Sulfide

Q includes conversion from
Sulfide to H2S

RL (ug) x 1000
Q x Duration

ppbx mw
24.45

Calibration Date

Calibration Date
10/18/2010 Linear Regression

RL(ug/ml) of sulfide	RL (ug) of sulfide	RL (ug) of H2S	RL (ppb) of H2S	RL (ug/m3)	T Corrected, no Blank correction			ug/ml of sulfide		Slope Y-int R2
					Result (ug) H2S	Result (ug/m3) H2S	Result (ppb) H2S	%Rec	absorbance	
0.072	0.752	0.798966249	0.37	0.513	ND	ND	ND		0	1.061946373
0.072	0.752	0.798966249	0.37	0.513	2.347389809	1.507879332	1.08173375		0.0716	0.097
0.072	0.752	0.798966249	0.37	0.513	ND	ND	ND		0.143	0.18
0.072	0.752	0.798966249	0.37	0.513	ND	ND	ND		0.286	0.356
0.072	0.752	0.798966249	0.40	0.551	1.296607324	0.894730297	0.641868311		0.572	0.683
0.072	0.752	0.798966249	0.40	0.551	1.401685572	0.967240062	0.693885908		1.145	1.237
0.072	0.752	0.798966249	0.40	0.551	1.464732521	1.010745921	0.725096467			
0.072	0.752	0.798966249	0.40	0.551	1.559302945	1.07600471	0.771912304			
0.072	0.752	0.798966249	0.37	0.513	ND	ND	ND			
0.072	0.752	0.798966249	0.37	0.513	ND	ND	ND			
0.072	0.752	0.798966249	0.40	0.554	1.632857719	1.131906575	0.812015603			
0.072	0.752	0.798966249	0.40	0.554	1.454224696	1.008077113	0.723181897			
0.072	0.752	0.798966249	0.40	0.554	1.075943002	0.745850017	0.535063462			
0.072	0.752	0.798966249	0.40	0.554	3.103953199	2.151678615	1.543587294			
0.072	0.752	0.798966249	0.37	0.513	ND	ND	ND			
0.072	0.752	0.798966249	0.37	0.513	ND	ND	ND			
0.072	0.752	0.798966249	0.37	0.513	ND	ND	ND			
0.072	0.752	0.798966249	#DIV/0!	#DIV/0!	ND	#DIV/0!	#DIV/0!			
0.072	0.752	0.798966249	#DIV/0!	#DIV/0!	ND	#DIV/0!	#DIV/0!			
0.072	0.752	0.798966249	#DIV/0!	#DIV/0!	ND	#DIV/0!	#DIV/0!			
0.072	0.752	0.798966249	#DIV/0!	#DIV/0!	ND	#DIV/0!	#DIV/0!			
0.072	0.752	0.798966249	#DIV/0!	#DIV/0!	ND	#DIV/0!	#DIV/0!			
0.072	0.752	0.798966249	0.37	0.513	ND	ND	ND	%Rec		
0.072	0.752	0.798966249	0.37	0.513	1.93758464	1.244635135	0.892865659	131		
0.072	0.752	0.798966249	0.37	0.513						

QC Results and Raw Data

Spectrophotometer Logbook

@Air Toxics Ltd.

Logbook#: 1927

Work Order: 1010269CDate: 10/18/10Method: Rad 170Analyst: M. SkidmoreWavelength: 665nm

Standard ID	Concentration	ABS
	Sulfide (µg/mL)	
Level 1 1993-80 -E	0.0716	0.097
Level 2 -D	0.143	0.180
Level 3 -C	0.286	0.356
Level 4 -B	0.572	0.683
Level 5 -A	1.145	1.237
ICV 1993-81	0.286	0.345

$$r = 0.9974$$

$$m = 1.062$$

$$b = 0.0596$$


ICV % Recovery = 101

Fraction	Dilution	ABS	Sample ID	Sample Volume	Comments
33A	1.00	0.090	115487	10.5 mL	
34A		0.263	115488		
35A		0.021	115489		
36A		0.022	115490		
37A		0.163	115579		
38A		0.173	115580		
39A		0.179	115581		
40A		0.188	115582		
41A		0.020	115583		
42A		0.021	115584		
43A		0.195	115696		
44A		0.178	115697		
45A		0.142	115698		
46A		0.335	115699		
47A		0.024	115700		
48A		0.021	115701		
48AA		0.026	↓		
B/K1		0.020	N/A		Lot: 110101
B/K2		0.018	↓		↓ 0.133 µg/mL
LCS		0.224	↓		↓ 0.286 µg/mL
CCV	✓	0.353	↓		
			→	MJS 10/19/10	

Procedure:

- 1.) Add 10 mL of H₂O to sample tube, cap and vortex for 1 minute.
- 2.) Add 0.5 mL of Ferric Chloride-Amine solution and cap immediately.
- 3.) Allow color to develop for 30 minutes.
- 4.) Measure absorbance at 665nm.

MJS 10/19/10

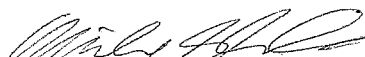
 Signed

10/19/10
 Date

Spectrophotometer Standard Preparation Log

@Air Toxics Ltd. Log Book #: 1993

Standard ID: 1993-76
Project: Rad 170 Amine Solution
Analyst: M. Skidmore
Preparation Date: 10/18/10
Expiration Date: 11/18/10

Solvent: HPLC H₂O
Solvent Lot #: DB 270

Procedure/Comments: _____

Sulfuric Acid Solution:

Slowly add 6.25 mL of concentrated sulfuric acid to 2.5 mL of D.I. H₂O, and let the solution cool. (sulfuric acid lot: 01428LS).

Amine Solution:

Dissolve 1.6875g of N,N-dimethyl-p-phenyldiammonium oxalate (located in ER1A; Lot: 63797PJ) in the above mentioned sulfuric acid solution. Dilute this solution to 250 mL with sulfuric acid-water 1:1 v/v. (This is roughly 120 mL H₂O + 120 mL sulfuric acid).

MJS 10/18/10

[Large handwritten signature/initials across the page]

MJS 10/18/10

Spectrophotometer Standard Preparation Log

@Air Toxics Ltd. Log Book #: 1993

Standard ID: 1993-77

Project: Ferric Chloride Solution Rad 170

Analyst: M. Skidmore

Preparation Date: 10/18/10

Expiration Date: 10/18/11

Solvent: HPLC H₂O

Solvent Lot #: DB 270

Procedure/Comments: Dissolve 125 g of ferric chloride hexahydrate
(located in ERAC, lot: 73297) in 50 mL of H₂O,

MJS 10/18/10

Spectrophotometer Standard Preparation Log

@Air Toxics Ltd. Log Book #: 1993

Standard ID: 1993-78

Project: Ferric Chloride-Amine Solution Read 170

Analyst: M. Skidmore


Preparation Date: 10/18/10

Expiration Date: 10/18/10

Solvent: HPLC H₂O

Solvent Lot #: DB270

Procedure/Comments: Add 12.5 mL of ferric chloride solution
(1993-77, exp 10/18/11) with 62.5 mL of amine solution
(1993-76, exp 11/18/10).

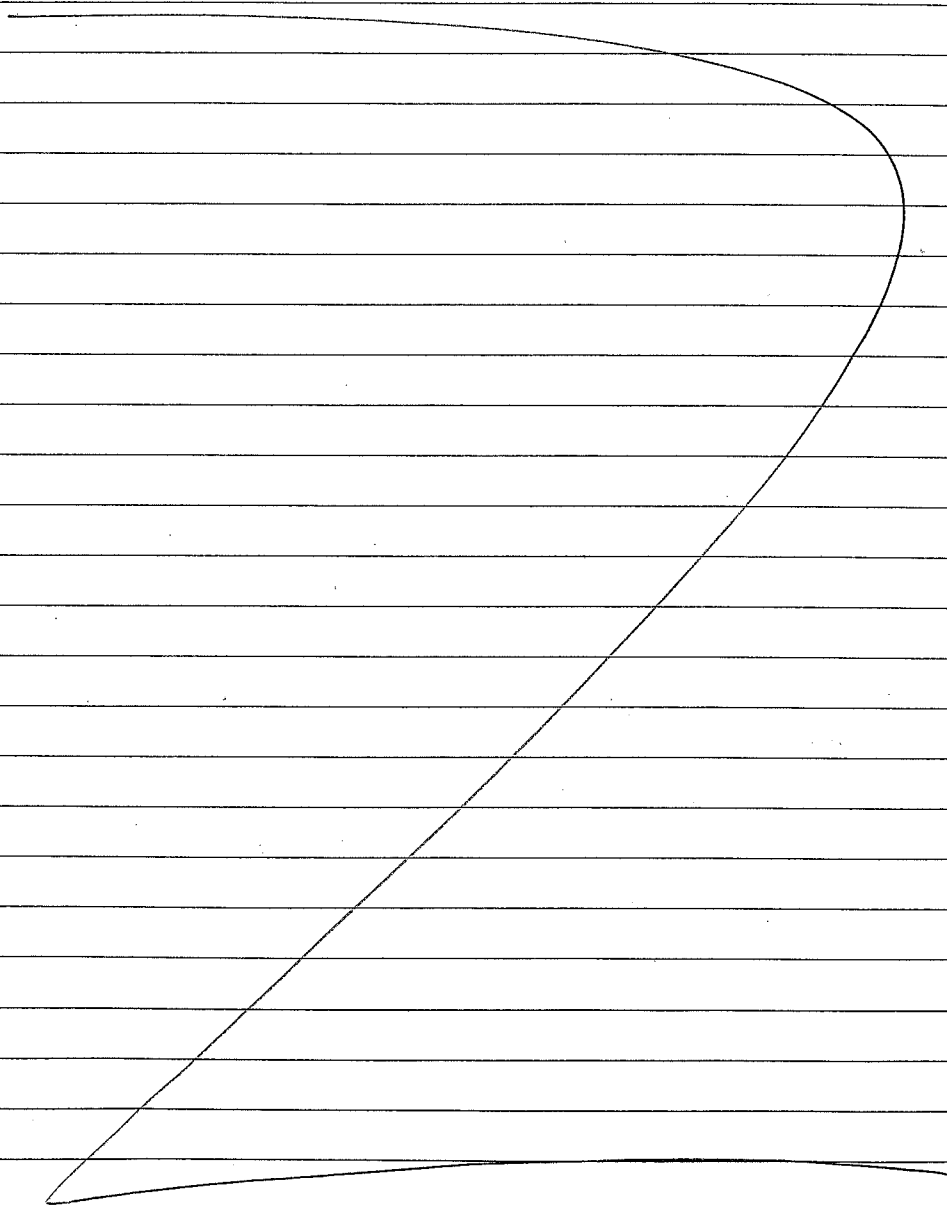

NJS
10/18/10

Spectrophotometer Standard Preparation Log

@Air Toxics Ltd. Log Book #: 1993Standard ID: 1993-79Project: Rad 170 H₂S LCSAnalyst: M. SkidmorePreparation Date: 10/18/10Expiration Date: 10/18/10Solvent: HPLC H₂OSolvent Lot #: DB270

Procedure/Comments: _____

A Rad 170 cartridge (lot: 10101) was placed in a 40 mL VOA vial. 10.0 mL of D.I. H₂O was aliquoted into the vial. 1.0 mL of H₂S gas (1476-1497; 1000 ppm) was injected into the vial, into the H₂O. The solution was allowed to gently shake for 2 hours. Then 0.5 of the ferric-chloride-amine (1993-78) was added to the vial and capped immediately. The solution was allowed to sit for 30 minutes and the absorbance was measured at 665 nm.

MTS 10/18/10

MTS
10/18/10

Spectrophotometer Standard Preparation Log

@Air Toxics Ltd. Log Book #: 1993

Standard ID: 1993-80

Project: Rad 170 calibration curve

Analyst: M. Skidmore

Preparation Date: 10/18/10

Expiration Date: 10/18/10

Solvent: HPLC H₂O

Solvent Lot #: DB 270

Procedure/Comments: _____

Solution A: 2 mL of Code Rad 171 (1476-1736, exp 2/3/11) (located in ER1B) with 98 mL of D.I. H₂O = 1.145 µg/mL

Solution B: 2.5 mL of Solution A with 2.5 mL of D.I. H₂O = 0.572 µg/mL

Solution C: 1.25 mL of Solution A with 3.75 mL of D.I. H₂O = 0.286 µg/mL

Solution D: 0.625 mL of Solution A with 4.375 mL of D.I. H₂O = 0.143 µg/mL

Solution E: 0.375 mL of Solution A with 5.625 mL of D.I. H₂O = 0.0716 µg/mL

Note: Each solution was measured immediately after it was prepared. Solution A is only stable in the flask it was prepared in.

MJS 10/18/10

MJS
10/18/10

Spectrophotometer Standard Preparation Log

@Air Toxics Ltd. Log Book #: 1993

Standard ID: 1993-81 *MTS 10/18/10*
Project: Rad 170 *ICV*
Analyst: Fm
Preparation Date: 10/18/10
Expiration Date: 10/18/10

Solvent: HPLC water
Solvent Lot #: DB270


Procedure/Comments: _____

Solution A: 2 mL of Code Rad 171 (1476-1736, exp 2/3/11) (located in ER1B) with
98 mL of D.I. H₂O = 1.145 µg/mL

Solution C: 1.25 mL of Solution A with 3.75 mL of D.I. H₂O = 0.286 µg/mL

Note: Each solution was measured immediately after it was prepared. Solution A is only
stable in the flask it was prepared in.

MTS 10/18/10

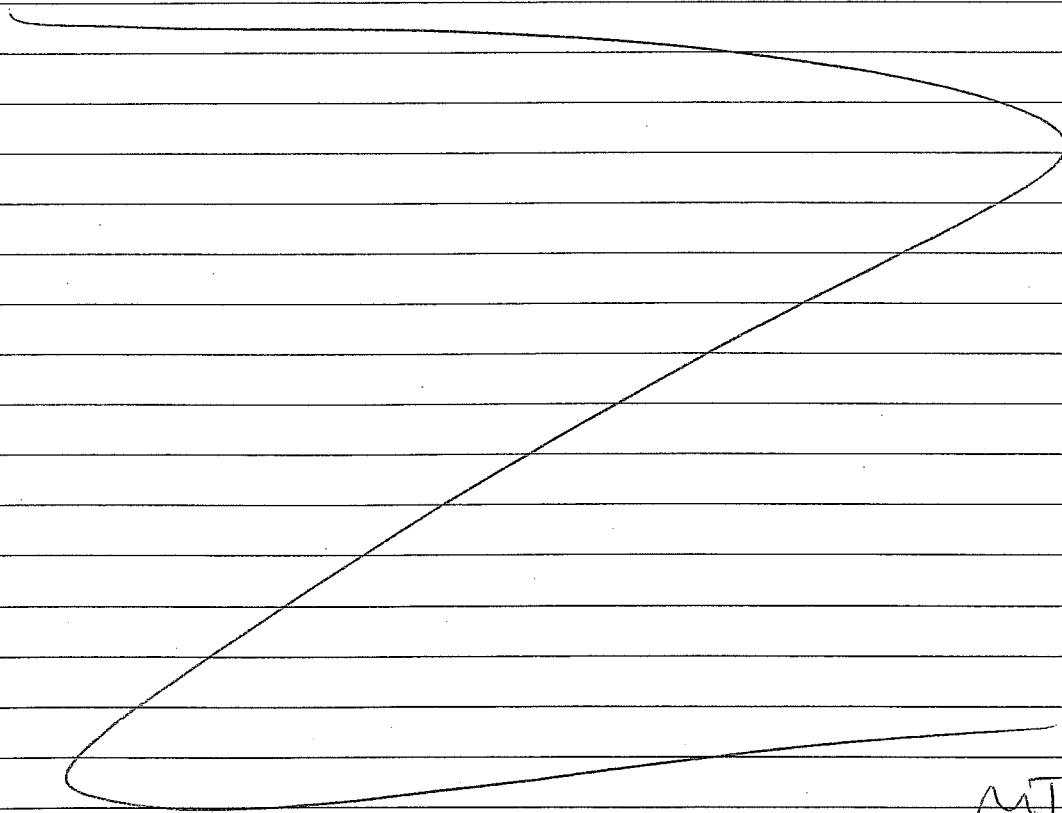

MTS 10/18/10

Fauzin
Signed

10/18/10
Date

[Signature]
Reviewed

10/18/10
Date

Shipping/ Receiving Documents

180 Blue Ravine Road, Suite B
Folsom, CA 95630

Phone (916) 985-1000 FAX (916) 985-1020

Hours 8:00 A.M. to 6:00 P.M. Pacific

COMPANY: Environmental Health & Engineering, Inc.
ATTENTION: Mr. Brian Baker
FAX #: 781-247-4305
FROM: Sample Receiving
Workorder #: 1010269C
of pages (Including Cover): 4

10/28/2010

Thank you for selecting Air Toxics Ltd. We have received your samples and have found no discrepancies.
In order to expedite analysis and reporting, please review the attached information for accuracy.

Corrections can be faxed to **Ausha Scott at 916-985-1020.**

ATL will proceed with the analysis as specified on the Chain of Custody and Sample Login page.

Environmental
Health &
Engineering, Inc.

CHAIN OF CUSTODY FORM

DATE: 10/12/10 1010268

FROM: Environmental Health and Engineering, Inc.
117 Fourth Avenue
Needham, MA 02494-2725

TO: Air Toxic

Please send invoices to ATTN: Accounts Payable
Please send reports to ATTN: Data Coordinator

In all correspondence regarding this matter, please refer to EH&E Project # 17314

The cost of this analysis will be covered by EH&E Purchase Order # 17314

For EH & E Data Coordinator - URGENT DATA ☐

SAMPLE ID	SAMPLE TYPE	ANALYTICAL METHOD/NUMBER	OTHER:Time/Date/Vol.
33A 115487	Air	H2S Analysis	14 Days 18 Hours 30 minutes
34A 115488			1
35A 115489			0
36A 115490			0
37A 115579			13 Days 18 Hours
38A 115580			1
39A 115581			1
40A 115582			1
41A 115583			0
42A 115584			0
43A 115696			13 Days 16 Hours 30 minutes
44A 115697			1
45A 115698			1
46A 115699			1
47A 115700			0
48A 115701			0

Special instructions:

- ☒ Standard turn around time ☐ Rush by _____ date/time ☐ Other _____
☐ Fax results 781-247-4305 ☒ Electronic transfer - datacoordinator@ehinc.com
☐ RETURN SAMPLES ☒ Additional report recipient bbaker@ehinc.com; tminegishi@ehinc.com

Each signatory please return one copy of this form to the above address

Relinquished by: Tom Tracy of Environmental Health & Engineering, Inc. Date: 10/12/10
Received by: Amelia White of (company name) ART Date: 10/13/10 09:00
Relinquished by: _____ of (company name) _____ Date: _____
Received by: _____ of (company name) _____ Date: _____
Relinquished by: _____ of (company name) _____ Date: _____
Received by: _____ of (company name) _____ Date: _____
Lab Data
Received by: _____ of Environmental Health & Engineering, Inc. Date: _____



Fed Ex 8739 262461 6829 10/13/10 Page 3 of 4

SAMPLE RECEIPT SUMMARY

WORKORDER 1010269C

Client	Phone	Date Promised: 10/26/10 11:59 pm
Mr. Brian Baker	800-825-5343	Date Completed: 10/26/10
Environmental Health & Engineering, Inc.	Fax	Date Received: 10/13/10
117 Fourth Avenue	781-247-4305	PO#: 17314
Needham, MA 02494		Project#: 17314
Sales Rep: TL		Total \$: \$ 1,360.00
		Logged By: AW

<u>Fraction</u>	<u>Sample #</u>	<u>Analysis</u>	<u>Collected</u>	<u>Amount\$</u>
33A	115487	ATL Applications	NA	\$80.00
34A	115488	ATL Applications	NA	\$80.00
35A	115489	ATL Applications	NA	\$80.00
36A	115490	ATL Applications	NA	\$80.00
37A	115579	ATL Applications	NA	\$80.00
38A	115580	ATL Applications	NA	\$80.00
39A	115581	ATL Applications	NA	\$80.00
40A	115582	ATL Applications	NA	\$80.00
41A	115583	ATL Applications	NA	\$80.00
42A	115584	ATL Applications	NA	\$80.00
43A	115696	ATL Applications	NA	\$80.00
44A	115697	ATL Applications	NA	\$80.00
45A	115698	ATL Applications	NA	\$80.00
46A	115699	ATL Applications	NA	\$80.00
47A	115700	ATL Applications	NA	\$80.00
48A	115701	ATL Applications	NA	\$80.00
48AA	115701 Lab Duplicate	ATL Applications	NA	\$0.00
49A	Lab Blank	ATL Applications	NA	\$0.00
49B	Lab Blank	ATL Applications	NA	\$0.00
50A	LCS	ATL Applications	NA	\$0.00

Note: Samples received after 3 P.M. PST are considered to be received on the following work day.
Atlas Project Name/Profile#: CPSC/14482

BILL TO: Accounts Payable
Environmental Health & Engineering, Inc.
117 Fourth Avenue
Needham, MA 02494

Analysis Code: Other GC

TERMS:

Reporting Method: ATL Application #59 H2S-Radiello 170

180 BLUE RAVINE ROAD, SUITE B FOLSOM, CA - 95630
(916) 985-1000 . (800) 985-5955 . FAX (916) 985-1020

SAMPLE RECEIPT SUMMARY Continued

Client	Phone	Date Promised:
		Date Completed:
		Date Received:
	Fax	PO#:
		Project#:
Sales Rep:		Total \$: \$ 1,360.00
		Logged By: AW

<u>Fraction</u>	<u>Sample #</u>	<u>Analysis</u>	<u>Collected</u>	<u>Amount\$</u>
Misc. Charges eCVP (16) @ \$5.00 each.				\$80.00

Note: Samples received after 3 P.M. PST are considered to be received on the following work day.
Atlas Project Name/Profile#: CPSC/14482

BILL TO: Accounts Payable
Environmental Health & Engineering, Inc.
117 Fourth Avenue
Needham, MA 02494

Analysis Code: Other GC

TERMS:

Reporting Method: ATL Application #59 H2S-Radiello 170

180 BLUE RAVINE ROAD, SUITE B FOLSOM, CA - 95630
(916) 985-1000 . (800) 985-5955 . FAX (916) 985-1020

@ Air Toxics Ltd	Title: Sample Discrepancy Report			Release Date: 03/03/10
	Form #: F1.3	Revision #: 1	Revision Date: 10/7/08	Page #: 1 of 2

Sample Discrepancy Report

Identification

Initiated By: AW Project ID: 14482 PM: AS Date: 10/13/2010 Discrepancy Type: ☐ 1. ☒ 2. ☐ 3.

Workorder(s) affected: 1010269A/B/C/D Sample(s) affected: All

1. Sample Receipt Discrepancies

Narration Not Required:

- 1.1. ☐ Sample container (cartridge/tube/VOA vial) was received broken, however sample was intact.
- 1.2. ☐ No brass cap on canister.
- 1.3. ☐ Date of Collection noted on first sample, but no arrow down to indicate all samples.

Notify Lab for further determination:

- 1.4. ☐ Tedlar bag received with minimal volume.

Initials: _____ Date: _____

Narration Required in Lab Narrative and Sample Confirmation:

- 1.5. ☐ COC was not filled out in ink.
- 1.6. ☐ COC improperly relinquished / received.
- 1.7. ☐ Sample tags / can numbers do not match the COC.
- 1.8. ☐ Sample date ☐ error / ☐ missing on COC but noted on sample tag (check one).
- 1.9. ☐ Custody Seal on the outside of the container was ☐ broken / ☐ improperly placed (check one).
- 1.10. ☐ ID-none on the sample Tag/Blank
- 1.11. ☐ Other (describe below).

Describe the Discrepancy: _____

2. Sample Receipt/Screening Discrepancies requiring PM notification

Document on Cover Page of Sample Receipt Confirmation and in Receiving Notes of Lab Narrative

If Section II. is filled out PM must be notified within 24 hrs of initiation

- | | |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none"> 2.1. <input type="checkbox"/> COC was not received with samples. 2.2. <input type="checkbox"/> Analysis method(s) is <input type="checkbox"/> not specified / <input type="checkbox"/> incorrectly specified (check one) on the COC. 2.3. <input type="checkbox"/> Incorrect sampling media / container for analysis requested. 2.4. <input type="checkbox"/> Number of samples on the COC does not match the number of samples that were received. 2.5. <input type="checkbox"/> Samples were received expired. 2.6. <input checked="" type="checkbox"/> Sampling date (time for sulfur) is not documented for <input type="checkbox"/> <u>some</u> / <input checked="" type="checkbox"/> <u>any</u> samples (check one). 2.7. <input type="checkbox"/> Sample received with amount of H₂O in the Tedlar Bag. 2.8. <input type="checkbox"/> Sample cannot be analyzed. Container was <input type="checkbox"/> received broken / <input type="checkbox"/> leaking / <input type="checkbox"/> flat / <input type="checkbox"/> defective. 2.9. <input type="checkbox"/> Tedlar bag / canister received emitting a strong odor; Sample <input type="checkbox"/> can / <input type="checkbox"/> cannot (check one) be analyzed. 2.10. <input type="checkbox"/> Tedlar Bag for Sulfur analysis has metal fitting. 2.11. <input type="checkbox"/> Environmental Supply Company valves 2.12. <input type="checkbox"/> Sorbent samples-sampling volume was not provided | <ul style="list-style-type: none"> 2.13. <input type="checkbox"/> Flow controller used – canister samples received at ambient or under pressure. 2.14. <input type="checkbox"/> Canister was at ambient pressure at time of pressurization and (check all that apply):
 <input type="checkbox"/> Canister failed leak check on two manifolds,
 <input type="checkbox"/> Canister valve was open,
 <input type="checkbox"/> Brass nut was loose/not present.
 <input type="checkbox"/> Sample can be analyzed
 <input type="checkbox"/> Cannot be analyzed 2.15. <input type="checkbox"/> Canister sample received with a vacuum difference >5.0"Hg between the receipt vac. And the final vac. reported on the COC, indicating loss of vacuum. 2.16. <input type="checkbox"/> Canister sample received at >15"Hg (<u>not</u> identified as a Trip/Field Blank). 2.17. <input type="checkbox"/> Canister Trip Blank received at low vacuum (< 25"Hg). 2.18. <input type="checkbox"/> Sorbent Sample received outside method required temperature of 2°C to 6°C; <input type="checkbox"/> ice / <input type="checkbox"/> blue ice (check one) was present. A temp. Blank <input type="checkbox"/> was / <input type="checkbox"/> was not present (check one). 2.19. <input type="checkbox"/> Other (describe below) |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

Initials: _____ Date: _____ Notify Receiving: ☐ Notify PM: ☐

Describe the Discrepancy: _____

3. Lab Discrepancies requiring Team Leader/PM notification

Document in Analytical Notes of Lab Narrative

If Section III. is filled out PM must be notified within 24 hrs of initiation

- | | |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------|
| 3.1. <input type="checkbox"/> Tedlar Bag found to be leaking at the time of analysis; sample <input type="checkbox"/> can / <input type="checkbox"/> cannot (check one) be analyzed. | 3.6. <input type="checkbox"/> Sample loss due to instrument malfunction / broken glassware. |
| 3.2. <input type="checkbox"/> Tedlar Bag found to be flat/low volume; sample cannot be analyzed. | 3.7. <input type="checkbox"/> Low/high surrogate recoveries noted in QC/sample(s) for extractable samples. |
| 3.3. <input type="checkbox"/> Sulfur samples received with insufficient time to analyze prior to expiration. | 3.8. <input type="checkbox"/> Reporting Limit was raised. |
| 3.4. <input type="checkbox"/> Canister found to be leaking at the time of analysis. | 3.9. <input type="checkbox"/> Post weight > Pre weight in field/lab Blank for PM10/TSP samples. |
| 3.5. <input type="checkbox"/> VOST tube saturated; bag dilution necessary. | 3.10. <input type="checkbox"/> Other (describe below). |

Initials: _____ Date: _____ Notify Receiving: ☐ Notify PM: ☐

Team Lead Initials: _____ Date: _____

Describe the Discrepancy: _____

How Does this Affect Client: _____

Project Manager Use Only

Project Manager Notification

☒ Section 2 Complete

☐ Section 3 Complete

Action:

- ☐ It is not necessary to notify the client. Narrate the discrepancy in Receiving Notes/Analytical Notes of Lab Narrative.

PM Initials: _____ Date: _____

- ☒ Client notification required. See attached client contact / email, or comments below:

Client Notification:

PM Initials: AS Person notified: BBaker

Date: 10/13/2010

- ☐ Waiting for Client Reply

Comments: Client emailed spreadsheet on 10/18

☐ Notify Lab Name: _____ Date: _____ Notify Receiving: ☐

- ☐ Additional notifications attached.

Additional Comments:

Other Records



Method : ATL Application #59 H2S-Radiello 170

CAS Number	Compound	Rpt. Limit (ug)
7783-06-4	Hydrogen Sulfide	1.2

@ Air Toxics Ltd	Title: Data Review Checklist		Release Date: 07/28/10	
	Form #: F1.27	Revision #: 2	Revision Date: 07/27/10	Page #: 1 of 2

DATA REVIEW CHECKLIST

Work Order #:

1010269C

A ₁	A ₂	W	T	R	Q	
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Analysis/Reporting vs. Project Profile/SOP requirements checked (i.e. 100% Dups, J-Flag to MDL, etc)
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	The final report has the correct reporting list, special units, and header info.
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Non-Standard sublist printed/verified, LOQ and LOD verified
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Lab Narrative is correct (proper method & description/Receiving & Analytical notes correct)
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Sample Discrepancy Report (SDR) is completed
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Corrective Action issued - #
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Unusual circumstances have been documented in the notes section below
						LUMEN validation report present and initialed
						CIRCLE (YES / NO)
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Lab Blank, CCV, LCS and DUP met QC criteria
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Hold time is met for all samples
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Appropriate data qualifier flags are applied
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Manual integrations for samples and QC are properly documented
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Samples analyzed within the project or method specific clock
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Retention times have been verified
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Appropriate ICAL(s) included, %RSD Recalculation
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	At least one result per sample is verified against the target quant sheets/raw data
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Dilution factor correctly calculated (sample load volume, syringe and bag dilutions, can pressurization(s))
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Correct amount of sample analyzed (i.e. sample not over-diluted)
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Spectra verified - documentation of spectral defense included (Section 5A of eCVP pkg)
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	TICs resemble reference spectra
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	TICs between duplicate samples are consistent
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Checked samples for trends (i.e. Influent vs. Effluent, Field Dups, Field/Trip Blank, etc.)
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Data for multiple analyses of sample(s) has been evaluated for comparability of results
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Special units for all samples in the final report are correctly calculated
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Manually entered results checked (i.e. TPH/NMOC)
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Chain of Custody verified for any special comments (i.e. different compounds/RLs, action levels)
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Chain of Custody scanned correctly
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Verify sample id's vs. chain of custody
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Date MDL(s) performed per instrument(s) 9/4/09
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Samples pressurized w/ appropriate gas (N ₂ or He) <input type="checkbox"/> Other (i.e. Tedlar bag, cartridge, sorbent)
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Final pressure consistent with canister size (6L vs. 1L)
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Verify receipt pressures
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Verify canister ID #'s
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Final invoice amount correct (adjusted for TAT, Penalties, Re-issue Charges etc.)
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Final PDF report reviewed for correctness

Notes: (to include: noting samples with QA/QC problems, Blanks with positive hits, narratives, etc.)

A/R: 21,270 minutes duration was used for all QC's and Trip Blanks.

T/Q:

A ₁ /A ₂	W/T	R*	Q
(Analytical Review/Date)	(Write-up/Tech Review/Date)	(Report Review/Date)	(QA Review/Date)
A ₁ : [Signature] 10/22/10	W: [Signature] 10/22/10	R: [Signature] 10/22/10	

A₂:

T:

Note (1): Please check all the appropriate boxes. Indicate "NA" for any statement that does not apply.

Note (2): Report reviewer and write-up reviewer must be separate individuals for DoD & Client Specific projects.

* Report Review is completed for DoD & Client Specific projects only.