

Manufacturer: Colbert Packaging Corporation
Model: PharmaDial
ASTM Type: VIIN

Description:

This is a semi-rigid blister non-reclosable package (Figure 1). There is a Valeron/cardboard tear-resistant cover over the front of the card. (See the top of Figure 1).

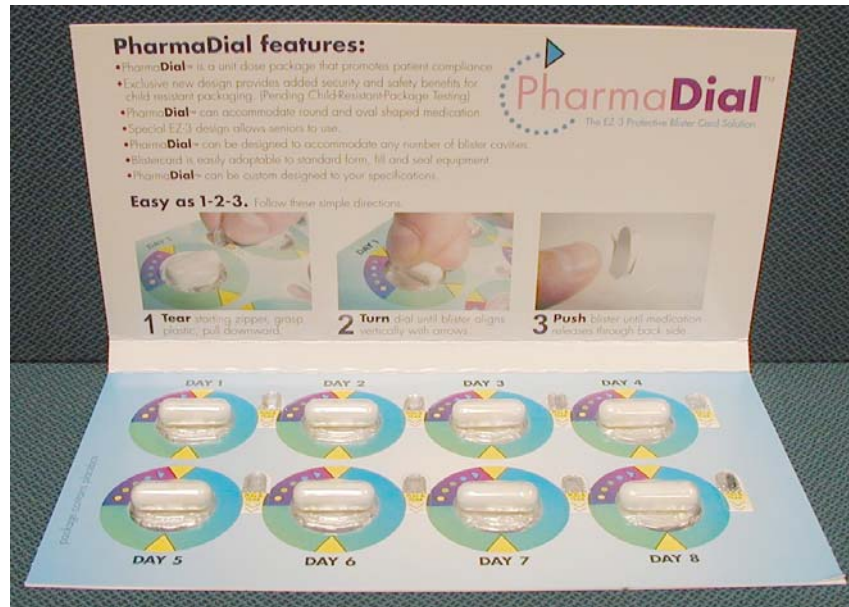


Figure 1

Each capsule is covered with a molded clear semi-rigid plastic film (Figure 2A). The back of the card is perforated Valeron/cardboard tear-resistant (Figure 2B) covering a paper and foil combination backing (Figure 2C).



Figure 2A



Figure 2B



Figure 2C

The package is opened by grasping the foil and plastic tab to the right of the capsule (Figure 3A), pulling the tab downward (Figure 3B) which releases the blister unit, and rotating the blister until the capsule is vertically aligned with the two yellow printed arrows (Figure 3B). The capsule is then pressed through the back of the package (Figure 3C).

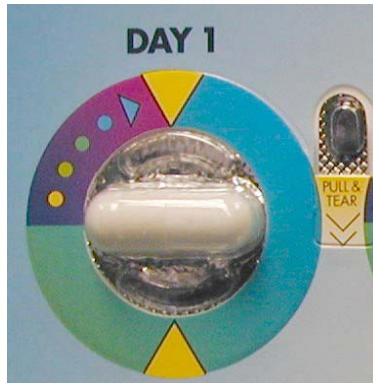


Figure 3A

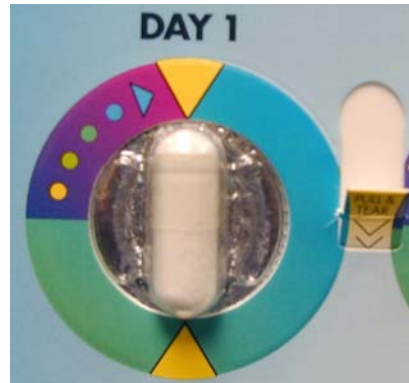


Figure 3B



Figure 3C

The manufacturer's instructions on the front cover of the card are below (Figure 4):



Figure 4

- 1 Tear** starting zipper, grasp plastic, pull downward.
(thumb and forefinger grasping plastic zipper tab)
- 2 Turn** dial until blister aligns vertically with arrows.
(thumb and forefinger rotating the blister)
- 3 Push** blister until medication releases through back side.
(medication pressed through the back of the package)