

Manufacturer: Intini Marketing Inc.
Model: Medi-Lock Clamshell
ASTM Type: XD

Description:

This package consists of a one-piece plastic box with a lid permanently attached by a continuous plastic hinge on one side of the lid (Figures 1 and 2).

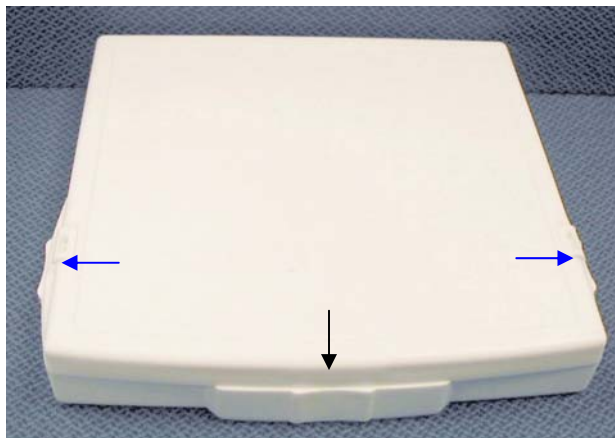


Figure 1

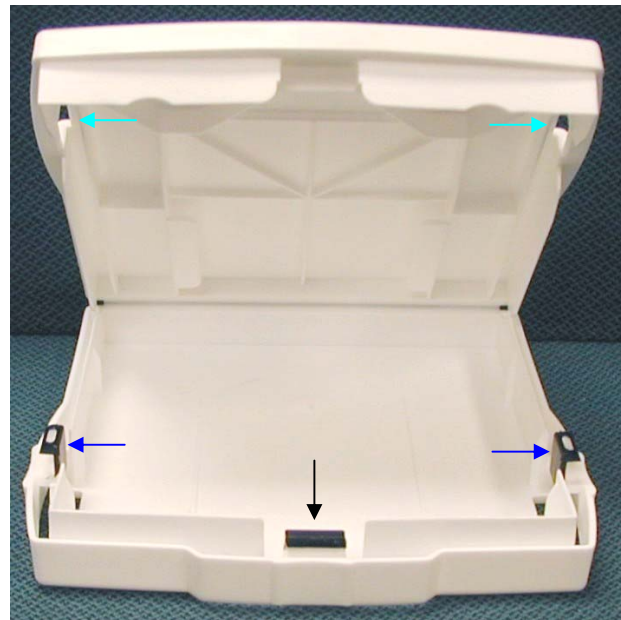


Figure 2

The package is opened by pressing a raised button on the center section on the front of the box below the lid (black arrow in Figure 1), lifting the lid slightly, then pressing two buttons on each side of the lid (two blue arrows in Figure 1), and the lid is lifted up. The center raised button section on the front of the package base has a lug (see black arrow in Figure 2) that fits into an indentation inside the front of the lid when the package is closed. The two buttons on each side of the package base each have a lug (see the dark blue arrows in Figure 2) that locks into a slot on each side of the lid when the package is closed (the light blue arrows in Figure 2).

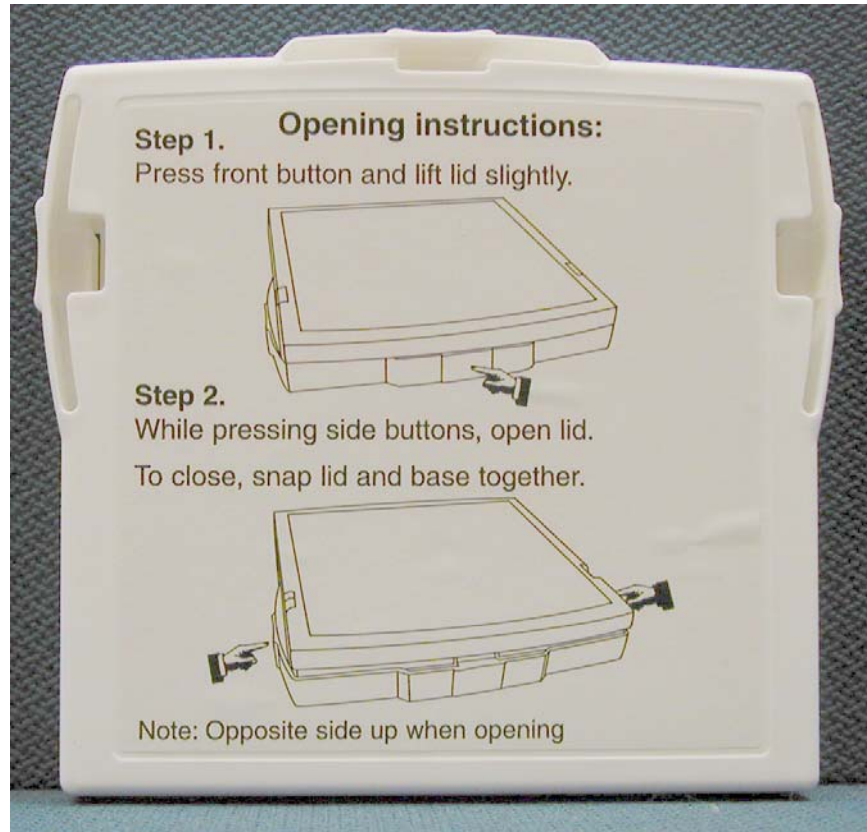


Figure 3

The manufacturer's instructions on the bottom of the package are (Figure 3):

Opening instructions:

Step 1.

Press front button and lift lid slightly.

(There is a picture of a hand pointing to the center button)

Step 2.

While pressing side buttons, open lid.

To close, snap lid and base together.

(There is a picture of 2 hands pointing to the buttons on both sides of the package)

Note: Opposite side up when opening