

Manufacturer: Pierson Industries Inc. (Contact Technimark Associates)
Model: Universally Adaptable Safety Closure
ASTM Type: VIIM

Description:

This package consists of a one-piece plastic aerosol overcap and ring (collar) that fit together on an aerosol container (orange aerosol overcap and yellow ring in Figure 1).



Figure 1

The ring (collar) fits onto the aerosol container valve rim. The ring consists of two circular lips with a groove between the two lips. There is an arrow on the lower lip that matches up with an indentation in the upper lip (Figure 2A). Inside the aerosol overcap there are three rims (Figure 2B) designed to fit into the groove between the two lips on the ring.

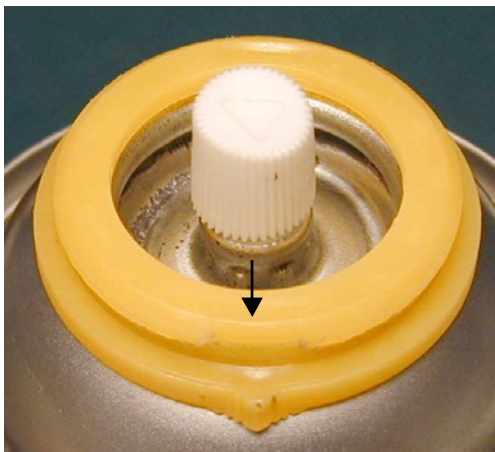


Figure 2A

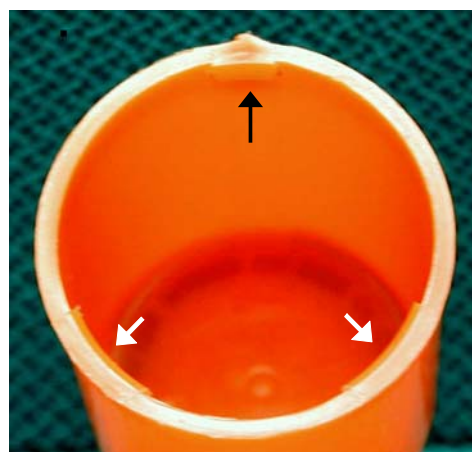


Figure 2B

The outside of the aerosol overcap has an arrow (Figure 1) that matches up with one of the three rims on the inside of the overcap (see black arrow in Figure 2B). To open the package the arrow on the ring and the arrow on the aerosol overcap are lined up, and then the aerosol overcap is pulled off.

The manufacturer's instructions on the closure are (Figure 3):



Figure 3

TO OPEN

ALIGN MARKS ON SIDE OF CAP