

**COMPREHENSIVE VALIDATION PACKAGE**

ATL Applications

INVENTORY SHEET

WORK ORDER # 0908628C

	Page Nos.	
	From	To
1. Work Order Cover Page & Laboratory Narrative & Table	1	3
2. Sample Results and Raw Data (Organized By Sample)	4	7
a. ATL Sample Results Form		
b. Target Compound Raw Data		
-Internal Standard Area and Retention Time Summary (If Applicable)		
-Surrogate Recovery Summary (If Applicable)		
-Chromatogram(s) and Ion Profiles (If Applicable)		
3. QC Results and Raw Data		
a. Method Blank (Results + Raw Data)	-	-
b. Surrogate Recovery Summary Form (If Applicable)	-	-
c. Internal Standard Summary Form (If Applicable)	-	-
d. Duplicate Results Summary Sheet	-	-
e. Matrix Spike/Matrix Spike Duplicate (Results + Raw Data)	-	-
f. Initial Calibration Data (Summary Sheet + Raw Data)	-	-
g. MDL Study (If Applicable)	-	-
h. Continuing Calibration Verification Data	-	-
i. Second Source LCS (Summary + Raw Data)	-	-
j. Extraction Logs	-	-
k. Instrument Run Logs/Software Verification	8	11
l. GC/MS Tune (Results + Raw Data)	-	-
4. Shipping/Receiving Documents:		
a. Login Receipt Summary Sheet	12	13
b. Chain-of-Custody Records	14	14
c. Sample Log-In Sheet	15	16
d. Misc. Shipping/Receiving Records (list individual records)		
<u>Sample Receipt Discrepancy Report</u>	17	18
5. Other Records (describe or list)		
a. <u>Manual Spectral Defense</u>	-	-
b. <u>Manual Intergrations</u>	-	-
c. <u>Manual Calculations</u>	-	-
d. <u>Canister Dilution Factors</u>	-	-
e. <u>Laboratory Corrective Action Request</u>	-	-
f. <u>CAS Number Reference</u>	19	20
g. <u>Variance Table</u>	-	-
h. <u>Canister Certification</u>	-	-
i. <u>Data Review Check Sheet</u>	21	21

Completed by:

*Kara McKiernan*

(Signature)

Kara McKiernan/ Document Control

(Print Name & Title)

09/21/09

(Date)

**WORK ORDER #: 0908628C**

Work Order Summary

<b>CLIENT:</b>	Mr. Taeko Minegishi Environmental Health & Engineering, Inc. 117 Fourth Avenue Needham, MA 02494	<b>BILL TO:</b>	Accounts Payable Environmental Health & Engineering, Inc. 117 Fourth Avenue Needham, MA 02494
<b>PHONE:</b>	800-825-5343	<b>P.O. #</b>	16512
<b>FAX:</b>	781-247-4305	<b>PROJECT #</b>	16512
<b>DATE RECEIVED:</b>	08/28/2009	<b>CONTACT:</b>	Ausha Scott
<b>DATE COMPLETED:</b>	09/17/2009		

<u>FRACTION #</u>	<u>NAME</u>	<u>TEST</u>
32A	101311	ATL Applications
33A(cancelled)	101312	ATL Applications
34A	101313	ATL Applications
34AA	101313 Lab Duplicate	ATL Applications
35A	101314	ATL Applications
36A	101315	ATL Applications
37A	101316	ATL Applications
38A	101665	ATL Applications
39A	101666	ATL Applications
40A	101667	ATL Applications
40AA	101667 Lab Duplicate	ATL Applications
41A	101668	ATL Applications
42A	101669	ATL Applications
43A	101670	ATL Applications
44A	101423	ATL Applications
45A	101424	ATL Applications
46A	101425	ATL Applications

Continued on next page

**WORK ORDER #: 0908628C**

Work Order Summary


**CLIENT:** Mr. Taeko Minegishi  
Environmental Health & Engineering,  
Inc.  
117 Fourth Avenue  
Needham, MA 02494

**BILL TO:** Accounts Payable  
Environmental Health & Engineering, Inc.  
117 Fourth Avenue  
Needham, MA 02494

**PHONE:** 800-825-5343                      **P.O. #** 16512  
**FAX:** 781-247-4305                      **PROJECT #** 16512  
**DATE RECEIVED:** 08/28/2009                      **CONTACT:** Ausha Scott  
**DATE COMPLETED:** 09/17/2009

<u>FRACTION #</u>	<u>NAME</u>	<u>TEST</u>
47A	101426	ATL Applications
48A	Method Blank	ATL Applications
48B	Method Blank	ATL Applications
48C	Method Blank	ATL Applications
49A	CCV	ATL Applications

CERTIFIED BY:

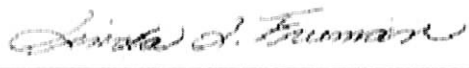

Laboratory Director

DATE: 09/17/09

This report shall not be reproduced, except in full, without the written approval of Air Toxics Ltd.

180 BLUE RAVINE ROAD, SUITE B FOLSOM, CA - 95630  
(916) 985-1000 . (800) 985-5955 . FAX (916) 985-1020

**LABORATORY NARRATIVE**  
**Ozone by Radiello 172**  
**Environmental Health & Engineering, Inc.**  
**Workorder# 0908628C**

Sixteen Radiello 172 (Ozone) samples were received on August 28, 2009. The procedure involves reaction of 4-pyridylaldehyde with 3-methyl-2-benzothiazolinone hydrazone to yield the corresponding azide. The absorbance is then measured at 430 nm using a spectrophotometer. Results are reported in uG and uG/m3.

Sampling rate of 24.6 mL/min was provided by the manufacturer.

**Receiving Notes**

The cartridge for sample 101312 was received broken. The client was notified that analysis was not possible.

**Analytical Notes**

Results were calculated based on 25 deg C without temperature correction. The actual exposure time was used to calculate sample concentrations and reporting limits.

An exposure time of 20160 minutes was used for the QC samples.

All media used for the sampling were supplied by the client. Blank subtraction was not performed on the sample results since the media used for Method Blanks may be from a different lot than the media used for the samples.

**Definition of Data Qualifying Flags**

Eight qualifiers may have been used on the data analysis sheets and indicate as follows:

- B - Compound present in laboratory blank greater than reporting limit.
- J - Estimated value.
- E - Exceeds instrument calibration range.
- S - Saturated peak.
- Q - Exceeds quality control limits.
- U - Compound analyzed for but not detected above the detection limit.
- M - Reported value may be biased due to apparent matrix interferences.
- N - The identification is based on presumptive evidence.

File extensions may have been used on the data analysis sheets and indicates as follows:

- a-File was requantified
- b-File was quantified by a second column and detector
- r1-File was requantified for the purpose of reissue

## **Sample Results and Raw Data**

---

# AIR TOXICS LTD.

ATL Application # 62 for RAD 172 (Ozone)

Spectrophotometer

Field	Lab	Collection Date	Analysis Date	Dilution Factor	Reporting Limit (ug)	Reporting Limit (ug/m3)	Amount (ug)	Amount (ug/m3)		
Sample ID.	Sample ID.	Date	Date							
101311	0908628C-32A	8/25/2009	8/31/2009	1.00	0.64	1.4	ND	ND		
101313	0908628C-34A	8/25/2009	8/31/2009	1.00	0.64	1.4	12	25		
101313 Lab Duplicate	0908628C-34AA	8/25/2009	8/31/2009	1.00	0.64	1.4	12	25		
101314	0908628C-35A	8/25/2009	8/31/2009	1.00	0.64	1.4	ND	ND		
101315	0908628C-36A	8/25/2009	8/31/2009	1.00	0.64	1.4	ND	ND		
101316	0908628C-37A	NA	8/31/2009	1.00	0.64	1.3	ND	ND		
101665	0908628C-38A	8/27/2009	8/31/2009	1.00	0.64	1.3	ND	ND		
101666	0908628C-39A	8/27/2009	8/31/2009	1.00	0.64	1.3	ND	ND		
101667	0908628C-40A	8/27/2009	8/31/2009	1.00	0.64	1.3	11	23		
101667 Lab Duplicate	0908628C-40AA	8/27/2009	8/31/2009	1.00	0.64	1.3	11	23		
101668	0908628C-41A	8/27/2009	8/31/2009	1.00	0.64	1.3	ND	ND		
101669	0908628C-42A	8/27/2009	8/31/2009	1.00	0.64	1.3	ND	ND		
101670	0908628C-43A	NA	8/31/2009	1.00	0.64	1.3	ND	ND		
101423	0908628C-44A	8/26/2009	8/31/2009	1.00	0.64	1.4	ND	ND		
101424	0908628C-45A	8/26/2009	8/31/2009	1.00	0.64	1.4	ND	ND		
101425	0908628C-46A	8/26/2009	8/31/2009	1.00	0.64	1.4	9.6	21		
101426	0908628C-47A	8/26/2009	8/31/2009	1.00	0.64	1.4	ND	ND		
Method Blank	0908628C-48A	NA	8/31/2009	1.00	0.64	1.3	ND	ND		
Method Blank	0908628C-48B	NA	8/31/2009	1.00	0.64	1.3	ND	ND		
Method Blank	0908628C-48C	NA	8/31/2009	1.00	0.64	1.3	ND	ND		
CCV	0908628C-49A	NA	8/31/2009	1.00	0.64	1.3	<table border="1"> <tr> <td>%Rec</td> <td>104</td> </tr> </table>		%Rec	104
%Rec	104									

COMMENTS: 1. NA=Not Applicable

2. ND=Not Detected

3. Exposure time of 20160 minutes was assumed for the QC samples.

4. Background subtraction not performed.

# Ozone Radiello Calculation Worksheet

Workorder #: **0908628C**  
 Sampling Rate (ml/min): 24.6 Typically 24.6 for Ozone  
 Sampling T (deg C): 25 Typically 25  
 Volume (ml): 5 Typically 5 for Ozone  
 Date of Analysis: 8/31/2009

(Abs-Y-int)/DF Slope  
 Conc (ug) x 1000000 Q x Duration Low Point/DF

LabSampleID	Corrected Q	Client	Ozone taking into account Temp	Abs	Duration (min)	DF	Ozone Conc (ug)	Conc (ug/m3)	RI(ug)
32A	24.6	101311	8/25/2009	0.053	18720	1.00	0.268309087	0.583	0.638
33A		101312	8/25/2009	NA	18720	1.00	#VALUE!	#VALUE!	0.638
34A		101313	8/25/2009	1.264	18720	1.00	11.6188254	25.230	0.638
34AA		101313 Lab Duplicate		1.266	18720	1.00	11.63757109	25.271	0.638
35A		101314	8/25/2009	0.047	18720	1.00	0.212072012	0.461	0.638
36A		101315	8/25/2009	0.059	18720	1.00	0.324546162	0.705	0.638
37A		101316	NA	0.033	20160	1.00	0.08085217	0.163	0.638
38A		101665	8/27/2009	0.046	20160	1.00	0.202699166	0.409	0.638
39A		101666	8/27/2009	0.038	20160	1.00	0.127716399	0.258	0.638
40A		101667	8/27/2009	1.243	20160	1.00	11.42199564	23.031	0.638
40AA		101667 Lab Duplicate		1.246	20160	1.00	11.45011418	23.088	0.638
41A		101668	8/27/2009	0.049	20160	1.00	0.230817704	0.465	0.638
42A		101669	8/27/2009	0.037	20160	1.00	0.118343554	0.239	0.638
43A		101670	NA	0.032	20160	1.00	0.071479324	0.144	0.638
44A		101423	8/26/2009	0.048	18720	1.00	0.221444858	0.481	0.638
45A		101424	8/26/2009	0.038	18720	1.00	0.127716399	0.277	0.638
46A		101425	8/26/2009	1.049	18720	1.00	9.603663545	20.854	0.638
47A		101426	8/26/2009	0.048	18720	1.00	0.221444858	0.481	0.638
48A		Method Blank	NA	0.035	20160	1.00	-0.228451743	#DIV/0!	0.638
48B		Method Blank	NA	0.032	20160	1.00	0.099597862	0.201	0.638
48C		Method Blank	NA	0.027	20160	1.00	0.071479324	0.144	0.638
49A		CCV	NA	0.734	20160	1.00	6.651217105	13.411	0.638

QC Duration 20160  
 CCV Spike Amt 6.384

RL (ug) x 1000000  
Q x Duration

Calibration Data  
Date of Calibration  
8/31/2009 Linear Regression

4-PA  
ug/ml\*0.224\*0.5ml

Slope 0.106691182  
Y-int 0.024373786  
R2 0.99920911

RL (ug/m3)	Result (ug)	Result (ug/m3)	%Rec
1.386	ND	ND	
1.386	#VALUE!	#VALUE!	
1.386	11.6188254	25.23023374	
1.386	11.63757109	25.27093994	
1.386	ND	ND	
1.386	ND	ND	
1.287	ND	ND	
1.287	ND	ND	
1.287	11.42199564	23.03118878	
1.287	11.45011418	23.08788669	
1.287	ND	ND	
1.287	ND	ND	
1.287	ND	ND	
1.287	ND	ND	
1.386	9.603663545	20.85431768	
1.386	ND	ND	
#DIV/0!	#DIV/0!	#DIV/0!	
#DIV/0!	#DIV/0!	#DIV/0!	
#DIV/0!	#DIV/0!	#DIV/0!	
#DIV/0!	#DIV/0!	#DIV/0!	
1.287	ND	ND	
1.287	ND	ND	
1.287	ND	ND	
1.287	6.651217105	13.41144241	

4-PA ug/ml	Ozone ug/ml	absorbance
0	0	0
5.7	0.6384	0.078
11.4	1.2768	0.160
22.8	2.5536	0.300
57	6.384	0.729
114	12.768	1.375

hand entry

%Rec  
104



## **QC Results and Raw Data**

---

# Spectrophotometer Logbook

@Air Toxics Ltd.

Log Book #: 1564

Work Order: 0908628c

Date: 8/31/09

Method: Rad 172

Analyst: A. Toyama

Wavelength: 430 nm

Prep. Notes:

Standard ID	Concentration	ABS
1858-24-5.7	5.7 $\mu\text{g/ml}$	0.078
↓ -11.4	11.4	0.160
↓ -22.8	22.8	0.300
↓ -57	57	0.729
↓ -114	114	1.375

$$r = 0.99920911$$

$$m = 0.106691182$$

$$b = 0.02437386$$

Fraction	Dilution	ABS	Sample ID	Sample Volume
32A	1.00	0.053	101311	5.0 mL
34A	↓	1.264	313	↓
35A	↓	0.047	314	↓
36A	↓	0.059	315	↓
37A	↓	0.033	316	↓
38A	↓	0.046	665	↓
39A	↓	0.038	666	↓
40A	↓	1.243	667	↓
41A	↓	0.049	668	↓
42A	↓	0.037	669	↓
43A	↓	0.032	670	↓
44A	↓	0.048	423	↓
45A	↓	0.038	424	↓
46A	↓	1.049	425	↓
47A	↓	0.048	426	↓

Notes: Blank Cartridges: Lot 09146

# Spectrophotometer Logbook

@Air Toxics Ltd.

Log Book #: 1564

Work Order: 0908628C

Date: \_\_\_\_\_ Method: \_\_\_\_\_  
Analyst: \_\_\_\_\_ Wavelength: \_\_\_\_\_  
Prep. Notes: \_\_\_\_\_

*cont. from page 35*

Standard ID                      Concentration                      ABS

8/31/09  
AG

r = \_\_\_\_\_  
m = \_\_\_\_\_  
b = \_\_\_\_\_

Fraction                      Dilution                      ABS                      Sample ID                      Sample Volume

34 AA	1.00	1.266	101313	50 mL
40 AA	↓	1.246	101667	↓
BIK	↓	0.035	NA	↓
BIK	↓	0.032	↓	↓
BIK	↓	0.027	↓	↓
LCS/CCV	↓	0.734	↓	↓

8/31/09  
AG

Notes: CCV/LCS prepared at 57 ug/mL

Standard ID: 1858-24

Solvent: DI H<sub>2</sub>O

Project: Rad 172 Calibration Solution

Solvent Lot #: NA

Analyst: A. Toyama

Preparation Date: 8/31/09

Expiration Date: 8/31/09

Procedure/Comments: Dissolve 20  $\mu$ l of 4-Pyridine - carboxaldehyde, 97% (1476-1103, Located F2214) in 200 ml DI H<sub>2</sub>O. From this solution prepare dilutions at 1:2, 1:5, 1:10, 1:20 and ~~1:40~~<sup>8/31/09 AT</sup>. Stock Solution = 114  $\mu$ g/ml

1:2) 250  $\mu$ l Pyridine solution with 250  $\mu$ l of DI H<sub>2</sub>O = 57  $\mu$ g/ml

1:5) 100  $\mu$ l of Pyridine solution with 400  $\mu$ l of DI H<sub>2</sub>O = 22.8  $\mu$ g/ml

1:10) 100  $\mu$ l of Pyridine solution with 900  $\mu$ l of DI H<sub>2</sub>O = 11.4  $\mu$ g/ml

1:20) 250  $\mu$ l of Pyridine 1:10 solution with 250  $\mu$ l of DI H<sub>2</sub>O = 5.7  $\mu$ g/ml  
(then remove 250  $\mu$ l of 1:10 solution to yield final volume of 0.5 ml)

Then add 4.5 ml of MBTH solution to each level, stir and let stand for 1 hour (cover with parafilm) Then read absorbance at 430 nm.

1  $\mu$ g of 4-pyridylaldehyde = 0.224  $\mu$ g of ozone

8/31/09  
AT

## **Shipping/ Receiving Documents**

---

**180 Blue Ravine Road, Suite B  
Folsom, CA 95630**

**Phone (916) 985-1000 FAX (916) 985-1020  
Hours 8:00 A.M. to 6:00 P.M. Pacific**

COMPANY: Environmental Health & Engineering, Inc.  
ATTENTION: Mr. Taeko Minegishi  
FAX #: 781-247-4305  
FROM: Sample Receiving  
Workorder #: 0908628C  
# of pages (Including Cover): 4

9/18/2009

Thank you for selecting Air Toxics Ltd. We have received your samples and have found discrepancies. In order to expedite analysis and reporting, please review the attached information for accuracy.

Corrections can be faxed to **Ausha Scott at 916-985-1020.**

ATL will proceed with the analysis as specified on the Chain of Custody and Sample Login page.

The following discrepancy has been observed:

The container for sample 101312 was received broken and cannot be analyzed. This will be noted on the report.

*Your prompt response is appreciated.*

DATE: 27 AUG 09

FROM: Environmental Health and Engineering, Inc.  
117 Fourth Avenue  
Needham, MA 02494-2725

TO: AIR TOXICS

Please send invoices to ATTN: Accounts Payable  
Please send reports to ATTN: Data Coordinator

In all correspondence regarding this matter, please refer to EH&E Project # 16512

The cost of this analysis will be covered by EH&E Purchase Order # 16512

For EH & E Data Coordinator - URGENT DATA

SAMPLE ID	SAMPLE TYPE	ANALYTICAL METHOD/NUMBER	START	OTHER: Time/Date/Vol. STOR
32A	AIR/PASSIVE	OZONE ANALYSIS	8/12/09	8/25/09
33A				
34A				
35A				
36A				
37A				
38A			8/13/09	8/27/09
39A				
40A				
41A				
42A				
43A				
44A			8/13/09	8/26/09
45A				
46A				
47A				

**Special Instructions:**

- Standard turn around time
- Fax results 781-247-4305
- RETURN SAMPLES
- Additional report recipient mfraylac@ehinc.com
- Rush by \_\_\_\_\_ date/time
- Electronic transfer - datacoordinator@ehinc.com

Fed ex 8704 2333 1898

Other  
**CUSTODY SEAL INTACT?**  
Y N NONE TEMP 6°C

**Each signatory please return one copy of this form to the above address**

Relinquished by: [Signature] of Environmental Health & Engineering, Inc. Date: 8/27/09

Received by: [Signature] 0850 of (company name) ATI Date: 8/28/09

Relinquished by: \_\_\_\_\_ of (company name) \_\_\_\_\_ Date: \_\_\_\_\_

Received by: \_\_\_\_\_ of (company name) \_\_\_\_\_ Date: \_\_\_\_\_

Relinquished by: \_\_\_\_\_ of (company name) \_\_\_\_\_ Date: \_\_\_\_\_

Received by: \_\_\_\_\_ of (company name) \_\_\_\_\_ Date: \_\_\_\_\_

Lab Data  
Received by: \_\_\_\_\_ of Environmental Health & Engineering, Inc. Date: \_\_\_\_\_

**SAMPLE RECEIPT SUMMARY**

**WORKORDER 0908628C**

<b>Client</b>	<b>Phone</b>	<b>Date Promised:</b> 09/09/09 11:59 pm
Mr. Taeko Minegishi	800-825-5343	<b>Date Completed:</b> 9/17/09
Environmental Health & Engineering, Inc.	<b>Fax</b>	<b>Date Received:</b> 8/28/09
117 Fourth Avenue	781-247-4305	<b>PO#:</b> 16512
Needham, MA 02494		<b>Project#:</b> 16512
<b>Sales Rep:</b> TL		<b>Total \$:</b> \$ 825.00
		<b>Logged By:</b> MG

<u>Fraction</u>	<u>Sample #</u>	<u>Analysis</u>	<u>Collected</u>	<u>Amount\$</u>
32A	101311	ATL Applications	8/25/2009	\$50.00
33A(cancelled)	101312	ATL Applications	8/25/2009	\$0.00
34A	101313	ATL Applications	8/25/2009	\$50.00
34AA	101313 Lab Duplicate	ATL Applications	8/25/2009	\$0.00
35A	101314	ATL Applications	8/25/2009	\$50.00
36A	101315	ATL Applications	8/25/2009	\$50.00
37A	101316	ATL Applications	NA	\$50.00
38A	101665	ATL Applications	8/27/2009	\$50.00
39A	101666	ATL Applications	8/27/2009	\$50.00
40A	101667	ATL Applications	8/27/2009	\$50.00
40AA	101667 Lab Duplicate	ATL Applications	8/27/2009	\$0.00
41A	101668	ATL Applications	8/27/2009	\$50.00
42A	101669	ATL Applications	8/27/2009	\$50.00
43A	101670	ATL Applications	NA	\$50.00
44A	101423	ATL Applications	8/26/2009	\$50.00
45A	101424	ATL Applications	8/26/2009	\$50.00
46A	101425	ATL Applications	8/26/2009	\$50.00
47A	101426	ATL Applications	8/26/2009	\$50.00
48A	Method Blank	ATL Applications	NA	\$0.00
48B	Method Blank	ATL Applications	NA	\$0.00

**Note:** Samples received after 3 P.M. PST are considered to be received on the following work day.  
 Atlas Project Name/Profile#: CPSC Indoor Air Monitoring/13297

**BILL TO:** Accounts Payable  
 Environmental Health & Engineering, Inc.  
 117 Fourth Avenue  
 Needham, MA 02494

Analysis Code: Other GC

**TERMS:**

Reporting Method: ATL Application #62 Ozone-Radiello 172

180 BLUE RAVINE ROAD, SUITE B FOLSOM, CA - 95630  
 (916) 985-1000 . (800) 985-5955 . FAX (916) 985-1020



**SAMPLE RECEIPT SUMMARY Continued**

<b>Client</b>	<b>Phone</b>	<b>Date Promised:</b> 09/09/09 11:59 pm
Mr. Taeko Minegishi	800-825-5343	<b>Date Completed:</b> 9/17/09
Environmental Health & Engineering, Inc.	<b>Fax</b>	<b>Date Received:</b> 8/28/09
117 Fourth Avenue	781-247-4305	<b>PO#:</b> 16512
Needham, MA 02494		<b>Project#:</b> 16512
<b>Sales Rep:</b> TL		<b>Total \$:</b> \$ 825.00
		<b>Logged By:</b> MG

<u>Fraction</u>	<u>Sample #</u>	<u>Analysis</u>	<u>Collected</u>	<u>Amount\$</u>
48C	Method Blank	ATL Applications	NA	\$0.00
49A	CCV	ATL Applications	NA	\$0.00
Misc. Charges eCVP (15) @ \$5.00 each.				\$75.00

**Note:** Samples received after 3 P.M. PST are considered to be received on the following work day.  
Atlas Project Name/Profile#: CPSC Indoor Air Monitoring/13297

**BILL TO:** Accounts Payable  
Environmental Health & Engineering, Inc.  
117 Fourth Avenue  
Needham, MA 02494

Analysis Code: Other GC

**TERMS:**

Reporting Method: ATL Application #62 Ozone-Radiello 172

180 BLUE RAVINE ROAD, SUITE B FOLSOM, CA - 95630  
(916) 985-1000 . (800) 985-5955 . FAX (916) 985-1020

# Sample Discrepancy Report

## Identification

Initiated By: MG Project ID: 13297 PM: AS Date: 8/31/2009 Discrepancy Type:  1.  2.  3.

Workorder(s) affected: 0908628 Sample(s) affected: 33A

## 1. Sample Receipt Discrepancies

### Narration Not Required:

- 1.1.  Sample container (cartridge/tube/VOA vial) was received broken, however sample was intact.
- 1.2.  No brass cap on canister.
- 1.3.  Date of Collection noted on first sample, but no arrow down to indicate all samples.

### Notify Lab for further determination:

- 1.4.  Tedlar bag received with minimal volume.

Initials: \_\_\_\_\_ Date: \_\_\_\_\_

### Narration Required In Lab Narrative and Sample Confirmation:

- 1.5.  COC was not filled out in Ink.
- 1.6.  COC Improperly relinquished / received.
- 1.7.  Sample tags / can numbers do not match the COC.
- 1.8.  Sample date  error /  missing on COC but noted on sample tag (check one).
- 1.9.  Custody Seal on the outside of the container was  broken /  Improperly placed (check one).
- 1.10.  ID-none on the sample Tag/Blank
- 1.11.  Other (describe below).

### Describe the Discrepancy:

## 2. Sample Receipt/Screening Discrepancies requiring PM notification

Document on Cover Page of Sample Receipt Confirmation and in Receiving Notes of Lab Narrative

### If Section II. is filled out PM must be notified within 24 hrs of Initiation

- 2.1.  COC was not received with samples.
- 2.2.  Analysis method(s) is  not specified /  incorrectly specified (check one) on the COC.
- 2.3.  Incorrect sampling media / container for analysis requested.
- 2.4.  Number of samples on the COC does not match the number of samples that were received.
- 2.5.  Samples were received expired.
- 2.6.  Sampling date (time for sulfur) is not documented for  some /  any samples (check one).
- 2.7.  Sample received with amount of H<sub>2</sub>O in the Tedlar Bag.
- 2.8.  Sample cannot be analyzed. Container was  received broken /  leaking /  flat /  defective.
- 2.9.  Tedlar bag / canister received emitting a strong odor; Sample  can /  cannot (check one) be analyzed.
- 2.10.  Tedlar Bag for Sulfur analysis has metal fitting.
- 2.11.  Environmental Supply Company valves
- 2.12.  Sorbent samples-sampling volume was not provided
- 2.13.  Flow controller used – canister samples received at ambient or under pressure.
- 2.14.  Canister was at ambient pressure at time of pressurization and (check all that apply):
  - Canister failed leak check on two manifolds,
  - Canister valve was open,
  - Brass nut was loose/not present.
  - Sample can be analyzed
  - Cannot be analyzed
- 2.15.  Canister sample received with a vacuum difference >5.0"Hg between the receipt vac. And the final vac. reported on the COC, indicating loss of vacuum.
- 2.16.  Canister sample received at >15"Hg (not identified as a Trip/Field Blank).
- 2.17.  Canister Trip Blank received at low vacuum (< 25"Hg).
- 2.18.  Sorbent Sample received outside method required temperature of 2°C to 6°C;  Ice /  blue ice (check one) was present. A temp. Blank  was /  was not present (check one).
- 2.19.  Other (describe below)

Initials: \_\_\_\_\_ Date: \_\_\_\_\_ Notify Receiving:  Notify PM:

Describe the Discrepancy: 2.8: According to the lab, sample 33A was broken, unable to analyze.

**3. Lab Discrepancies requiring Team Leader/PM notification**

Document in Analytical Notes of Lab Narrative

**If Section III. is filled out PM must be notified within 24 hrs of Initiation**

- 3.1.  Tedlar Bag found to be leaking at the time of analysis; sample  can /  cannot (check one) be analyzed.
- 3.2.  Tedlar Bag found to be flat/low volume; sample cannot be analyzed.
- 3.3.  Sulfur samples received with insufficient time to analyze prior to expiration.
- 3.4.  Canister found to be leaking at the time of analysis.
- 3.5.  VOST tube saturated; bag dilution necessary.
- 3.6.  Sample loss due to instrument malfunction / broken glassware.
- 3.7.  Low/high surrogate recoveries noted in QC/sample(s) for extractable samples.
- 3.8.  Reporting Limit was raised.
- 3.9.  Post weight > Pre weight in field/lab Blank for PM10/TSP samples.
- 3.10.  Other (describe below).

Initials: \_\_\_\_\_ Date: \_\_\_\_\_ Notify Receiving:  Notify PM:   
 Team Lead Initials: \_\_\_\_\_ Date: \_\_\_\_\_

**Describe the Discrepancy:** \_\_\_\_\_  
 \_\_\_\_\_  
 \_\_\_\_\_

**How Does this Affect Client:** \_\_\_\_\_  
 \_\_\_\_\_  
 \_\_\_\_\_

**Project Manager Use Only**

**Project Manager Notification**

**Section 2 Complete**       **Section 3 Complete**

**Action:**

It is not necessary to notify the client. Narrate the discrepancy in Receiving Notes/Analytical Notes of Lab Narrative.

PM Initials: \_\_\_\_\_ Date: \_\_\_\_\_

Client notification required. See attached client contact / email, or comments below:

**Client Notification:**

PM Initials: AS    Person notified: B.Baker                      Date: 9/2/2009

Waiting for Client Reply

Comments: \_\_\_\_\_  
 \_\_\_\_\_

Notify Lab                      Name: \_\_\_\_\_                      Date: \_\_\_\_\_                      **Notify Receiving:**

**Additional notifications attached.**

**Additional Comments:**

\_\_\_\_\_

## **Other Records**

---



---

Method : ATL Application #62 Ozone-Radiello 172

CAS Number	Compound	Rpt. Limit (ug)
10028-15-6	Ozone	1.0

DATA REVIEW CHECKLIST

Work Order #:

0908628C

A1 A2 R T M Q
[checkboxes]

Analysis/Reporting vs. Project Profile/SOP requirements checked (i.e. 100% Dups, J-Flag to MDL, etc)
The final report has the correct reporting list, special units, and header info.
Lab Narrative is correct (proper method & description/Receiving & Analytical notes correct)
Sample Discrepancy Report (SDR) is completed

NA [checkboxes]

Corrective Action issued - #
Unusual circumstances have been documented in the notes section below

LUMEN validation report present and initialed

CIRCLE (YES (NO))

[checkboxes]

Lab Blank, CCV, LCS and DUP met QC criteria
Hold time is met for all samples
Appropriate data qualifier flags are applied
Manual integrations for samples and QC are properly documented
Samples analyzed within the project or method specific clock
Retention times have been verified
Appropriate ICAL(s) included
At least one result per sample is verified against the target quant sheets/raw data

[checkboxes]

Dilution factor correctly calculated (sample load volume, syringe and bag dilutions, can pressurization(s))
Correct amount of sample analyzed (i.e. sample not over-diluted)
Spectra verified - documentation of spectral defense included (Section 5A of eCVP pkg)
TICs resemble reference spectra
TICs between duplicate samples are consistent
Checked samples for trends (i.e. Influent vs. Effluent, Field Dups, Field/Trip Blank, etc.)
Data for multiple analyses of sample(s) has been evaluated for comparability of results

[checkboxes]

Special units for all samples in the final report are correctly calculated
Manually entered results checked (i.e. TPH/NMOC)
Chain of Custody verified for any special comments (i.e. different compounds/RLs, action levels)
Chain of Custody scanned correctly
Verify sample id's vs. chain of custody
Date MDL(s) performed per instrument(s)

NA [checkboxes]

Samples pressurized w/ appropriate gas (N2 or He) Other (i.e. Tedlar bag, cartridge, sorbent)
Final pressure consistent with canister size (6L vs. 1L)
Verify receipt pressures
Verify canister ID #'s
Final invoice amount correct (adjusted for TAT, Penalties, Re-issue Charges etc.)

[checkboxes]

MDL date(s) present for all instruments utilized
Client LUMEN report reviewed for accuracy and completeness

Notes: (to include: noting samples with QA/QC problems, Blanks with positive hits, narratives, etc.)

A/R:

Dup - 34A, 40A

Cancelled: 33A

M/Q:

A1/A2 (Analytical Review/Date) R/T (Reporting Review/Date) M (Management Review/Date) Q (QA Review/Date)
A1: 9/11/09 R: M 9/17/09

Note (1): Please check all the appropriate boxes. Indicate "NA" for any statement that does not apply. Rev. 02/20/09
Note (2): Management reviewer and reporting reviewer must be separate individuals.